

Fisher-Price®

Diaper Pail


Instructions

- Adult assembly required.
- Please save these instructions for future reference.


WARNING

- When using the Diaper Pail, make sure the lock knob is in the LOCK position to protect children from accidental drowning.
- Use NON-TOXIC deodorizing cakes.
- To avoid danger of suffocation, keep plastic bags away from children.


Assembly

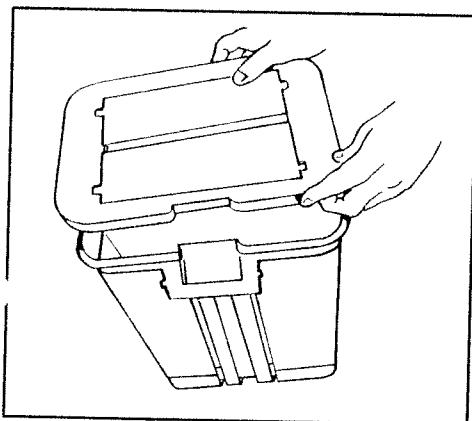

1. Place a plastic bag in the Diaper Pail, if desired.
2. Place the inner lid (with flip-down doors) on top of (and over top edge of plastic bag, if used) the Diaper Pail.

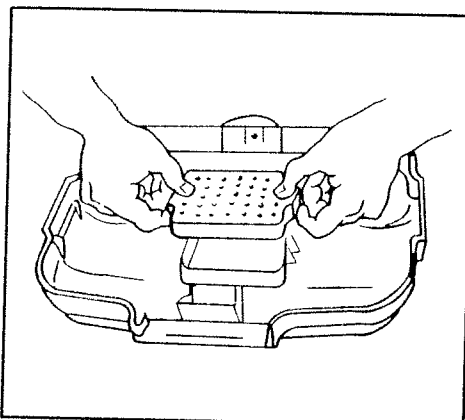


3. Open the deodorizer compartment in the outer lid. Insert a deodorizer cake and close the compartment.

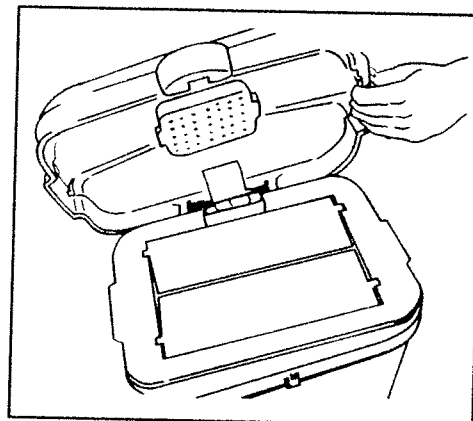

4. Snap the outer lid onto the Diaper Pail.
NOTE: The outer lid can be snapped into place before the inner lid.

Use

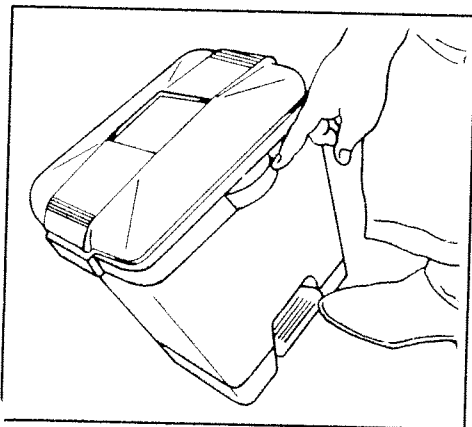

1. To open, turn the lock knob to the UNLOCK position.
2. Press the foot pedal to raise lid; release the foot pedal to close the lid.
3. Turn the lock knob to the LOCK position to close the Diaper Pail securely.

Cleaning

- Wash the Diaper Pail with a mild soap and water solution, and rinse thoroughly.

The LOCK and UNLOCK positions are indicated on the lock knob. Be sure to turn the lock knob to the LOCK position to close the Diaper Pail securely.

If you have any problems with this product, please call Fisher-Price Consumer Affairs at 1-800-432-KIDS (1-800-432-5437) between 8AM and 5PM Eastern time, Monday through Friday, or write to:

Fisher-Price
Attn: Consumer Affairs
636 Girard Avenue
East Aurora, New York 14052

In Canada, if you have any problems with this product, please write to:

Fisher-Price Inc.
Consumer Affairs Department
5300 Tomken Road
Mississauga, Ontario L4W 1P2

Instructions


Seau à couches

- Doit être assemblé par un adulte.
- Veuillez conserver ces directives pour vous y référer au besoin.


ATTENTION

- Pour éviter tout risque de noyade, assurez-vous que le bouton de sûreté est à la position LOCK (verrouillé) lorsque vous utilisez le seau à couches.
- Utilisez toujours un désodorisant NON-TOXIQUE.
- Pour éviter tout risque de suffocation, gardez les sacs en plastique hors de portée des enfants.


Assemblage

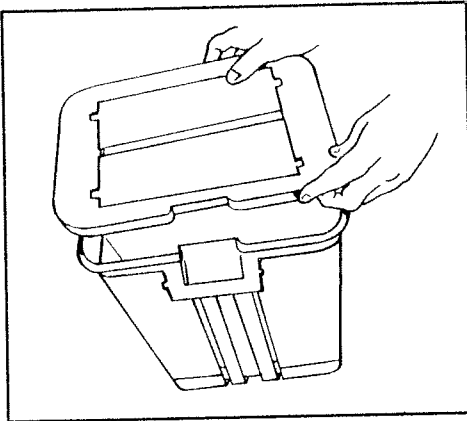

1. Placez un sac en plastique dans le seau (facultatif).
2. Mettez le couvercle interne (à panneaux battants) sur le seau à couches let sur la bordure du sac de plastique, s'il y a lieu).

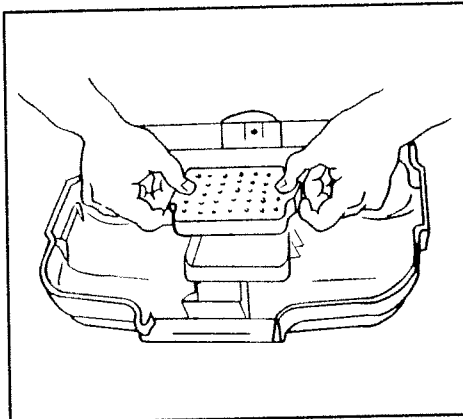


3. Ouvrez le compartiment, à désodorisant du couvercle supérieur. Déposez le désodorisant et refermez le compartiment.

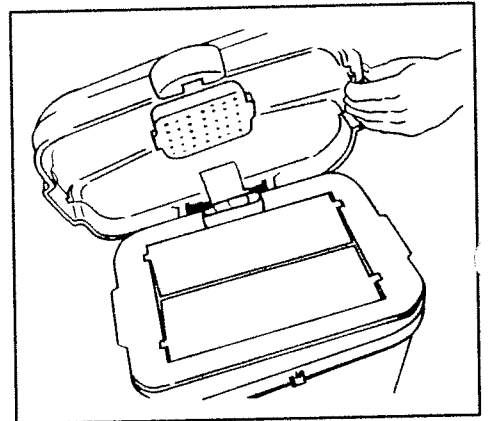

4. Enclenchez le couvercle supérieur sur le seau.
Nota: Le couvercle supérieur peut être mis en place avant le couvercle interne.

Mode d'emploi

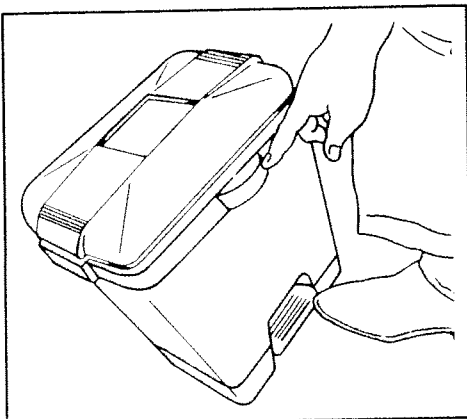

Glissez le bouton à la position LOCK (verrouillé) pour vous assurer que le couvercle soit sûrement fermé.

1. Pour l'ouvrir, glissez le bouton à la position UNLOCK (déverrouillé).
2. Pressez la pédale du pied pour relever le couvercle; relâchez-la pour le rabattre.
3. Glissez le bouton de sûreté à la position LOCK (verrouillé) pour vous assurer que le seau à couches est sûrement fermé.

Nettoyage

- Lavez le seau à couches à l'eau savonneuse et rincez à fond

Si vous avez quelque problème avec ce jouet, écrivez à:

Fisher-Price Inc.
Service aux consommateurs
5300 Tomken Road
Mississauga, Ontario L4W 1P2